


ASSEMBLY


STEP 1.

Attach DS Tape to pelmet
Slide in fabric with flat spline

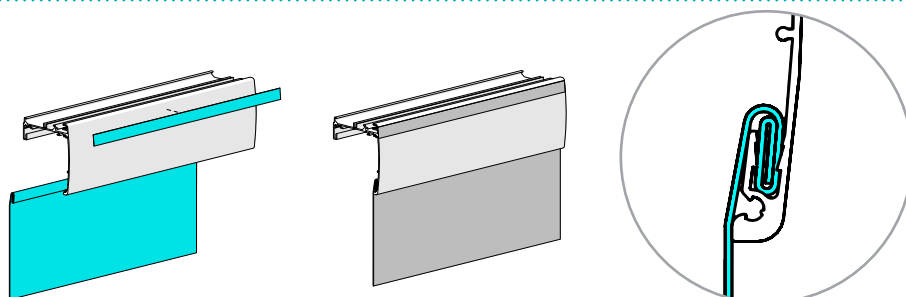


STEP 2.

Pull fabric over pelmet face
Applied DS Tape stops the fabric stretching
Use spline roller tool to embed round spline and fabric in pelmet

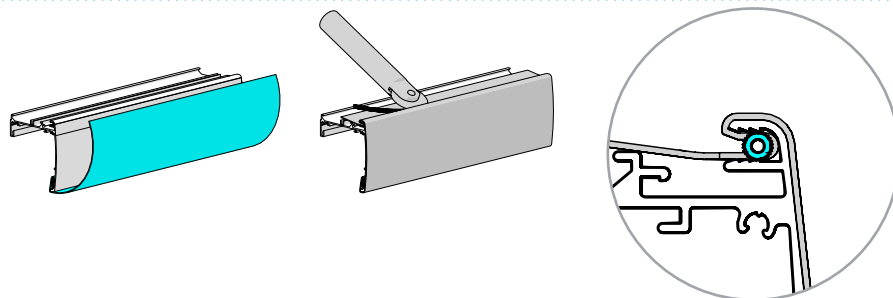

STEP 3.


Trim any excess fabric

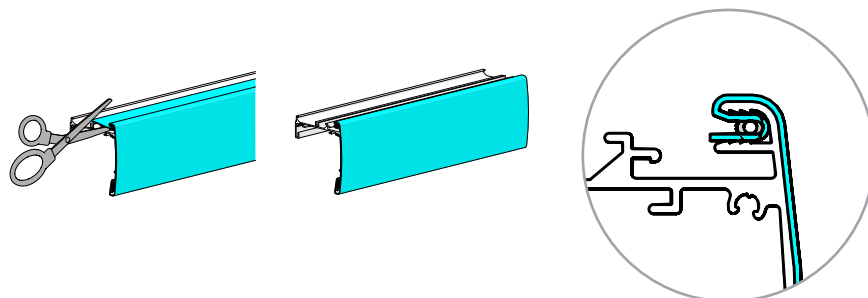

STEP 4.


Attach brackets to pelmet
Fasten in place with set screw (grub screw)

[Tap bracket with 4mm drill as required]

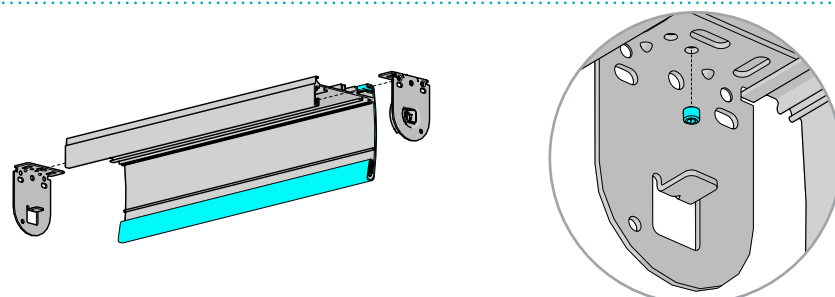


STEP 5.

Attach end caps
Fasten with screws provided

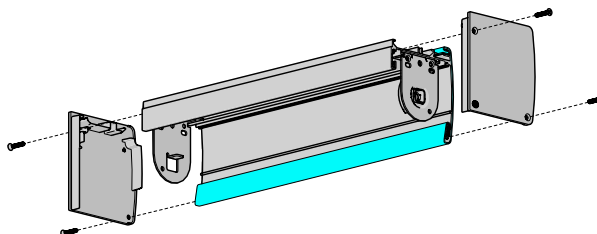

STEP 6.


Install roller shade

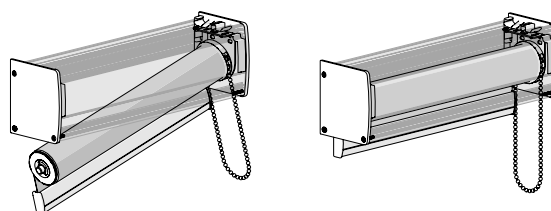

INSTALLATION

STEP 1.


Measure correct spacing

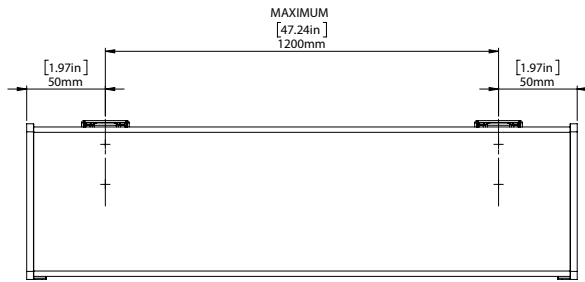

STEP 2.


Install brackets

FACE FIX | WALL MOUNT TOP FIX | CEILING MOUNT

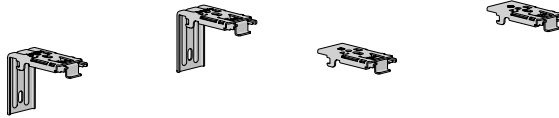

STEP 3.

Attach pelmet assembly to brackets

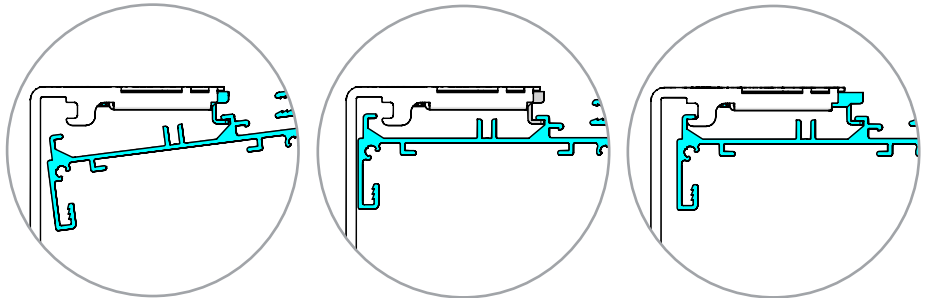

Finished installation

